


Current part is item (30) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)

(1) (a) FIG. NO.	(2) (b) ITEM NO.	(3) SMR CODE	(4) NATIONAL STOCK NUMBER	(5) PART NUMBER	(6) DESCRIPTION FSCM	(7) U/M	(8) INC IN UNIT
GROUP 01-TRANSMISSION 0700-TRANSMISSION ASSEMBLY							
94	2	PAOZZ	4820-00-726-4719	5196397	00000 VALVE ASSEMBLY,AIR	EA	1
94A	10	PAOZZ	4730-00-172-0034	MS15003-6	96906 FITTING,LUBRICATION:CLUTCH HOUSING	EA	3
94A	12	PAOZZ	5306-00-044-5319	8712073	19207 BOLT:TRANSMISSION CASE	EA	10
94A	25	PAOZZ	4730-00-278-3350	MS49005-10	96906 PLUG,PIPE:OIL FILTER DRAIN	EA	2
94A	30	PAOZZ	5330-00-752-0957	7520957	19207 GASKET:INSPECTION HOLE COVER	EA	1
94A	31	PAOZZ	2520-00-752-0956	7520956	19207 COVER PLATE,ACCESS:INSPECTION HOLE	EA	1
94A	32	PAOZZ	5310-00-584-5272	MS35338-10	96906 WASHER,LOCK:CLUTCH HOUSING	EA	5
94A	33	PAOZZ	5305-00-716-8184	MS90726-112	96906 SCREW,CAP,HEXAGON HEAD:CLUTCH HOUSING	EA	5
94A	36	PAOZZ	4730-00-050-4208	MS15003-1	96906 FITTIN,LUBRICATION:RELEASE BEARING	EA	1



Current part is item (30) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)

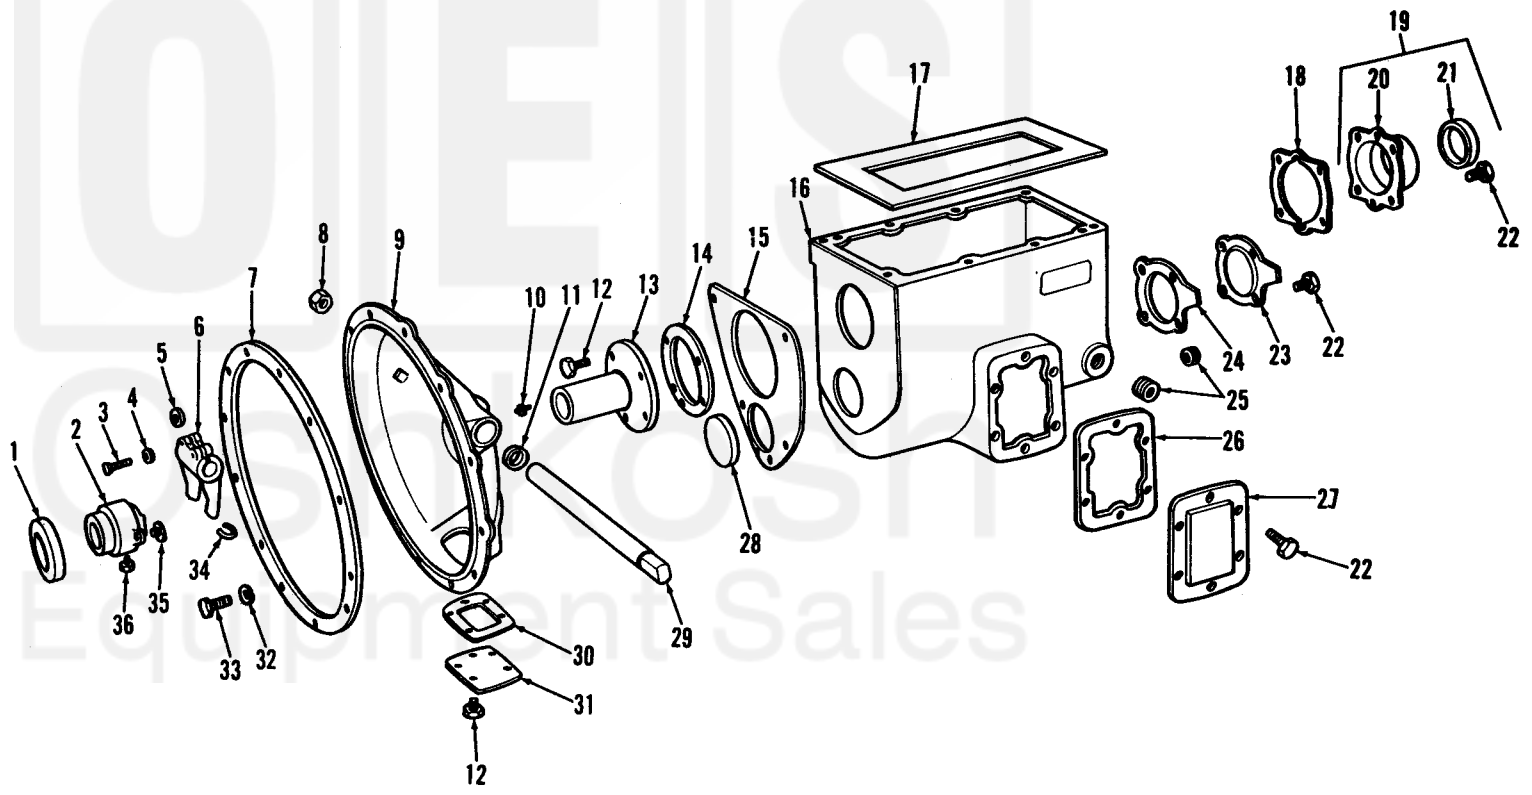

TA 031532

Figure 94A. Transmission Assembly – exploded view.

Current part is item (30) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)