


Current part is item (30) on diagram. Available at www.oshkoshequipment.com

(1) (a) FIG. NO.	(2) (b) ITEM NO.	(3) SMR CODE	(4) NATIONAL STOCK NUMBER	(5) PART NUMBER	(6) DESCRIPTION FSCM	(7) U/M	(8) INC IN UNIT
GROUP 01-TRANSMISSION 0700-TRANSMISSION ASSEMBLY							
94	2	PAOZZ	4820-00-726-4719	5196397	00000 VALVE ASSEMBLY,AIR	EA	1
94A	10	PAOZZ	4730-00-172-0034	MS15003-6	96906 FITTING,LUBRICATION:CLUTCH HOUSING	EA	3
94A	12	PAOZZ	5306-00-044-5319	8712073	19207 BOLT:TRANSMISSION CASE	EA	10
94A	25	PAOZZ	4730-00-278-3350	MS49005-10	96906 PLUG,PIPE:OIL FILTER DRAIN	EA	2
94A	30	PAOZZ	5330-00-752-0957	7520957	19207 GASKET:INSPECTION HOLE COVER	EA	1
94A	31	PAOZZ	2520-00-752-0956	7520956	19207 COVER PLATE,ACCESS:INSPECTION HOLE	EA	1
94A	32	PAOZZ	5310-00-584-5272	MS35338-10	96906 WASHER,LOCK:CLUTCH HOUSING	EA	5
94A	33	PAOZZ	5305-00-716-8184	MS90726-112	96906 SCREW,CAP,HEXAGON HEAD:CLUTCH HOUSING	EA	5
94A	36	PAOZZ	4730-00-050-4208	MS15003-1	96906 FITTIN,LUBRICATION:RELEASE BEARING	EA	1



Current part is item (30) on diagram. Available at www.oshkoshequipment.com

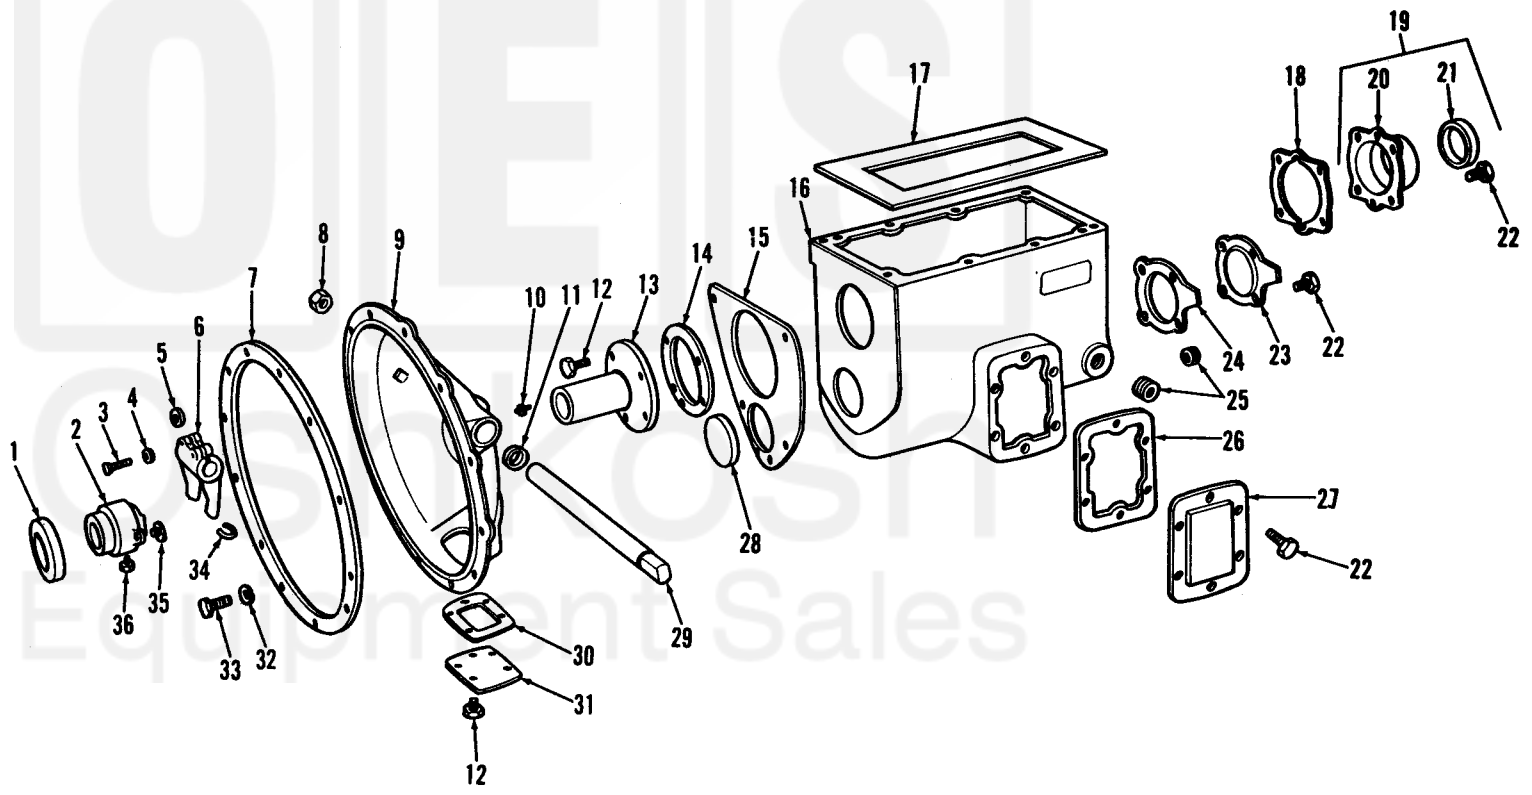

TA 031532

Figure 94A. Transmission Assembly – exploded view.

Current part is item (30) on diagram. Available at www.oshkoshequipment.com