

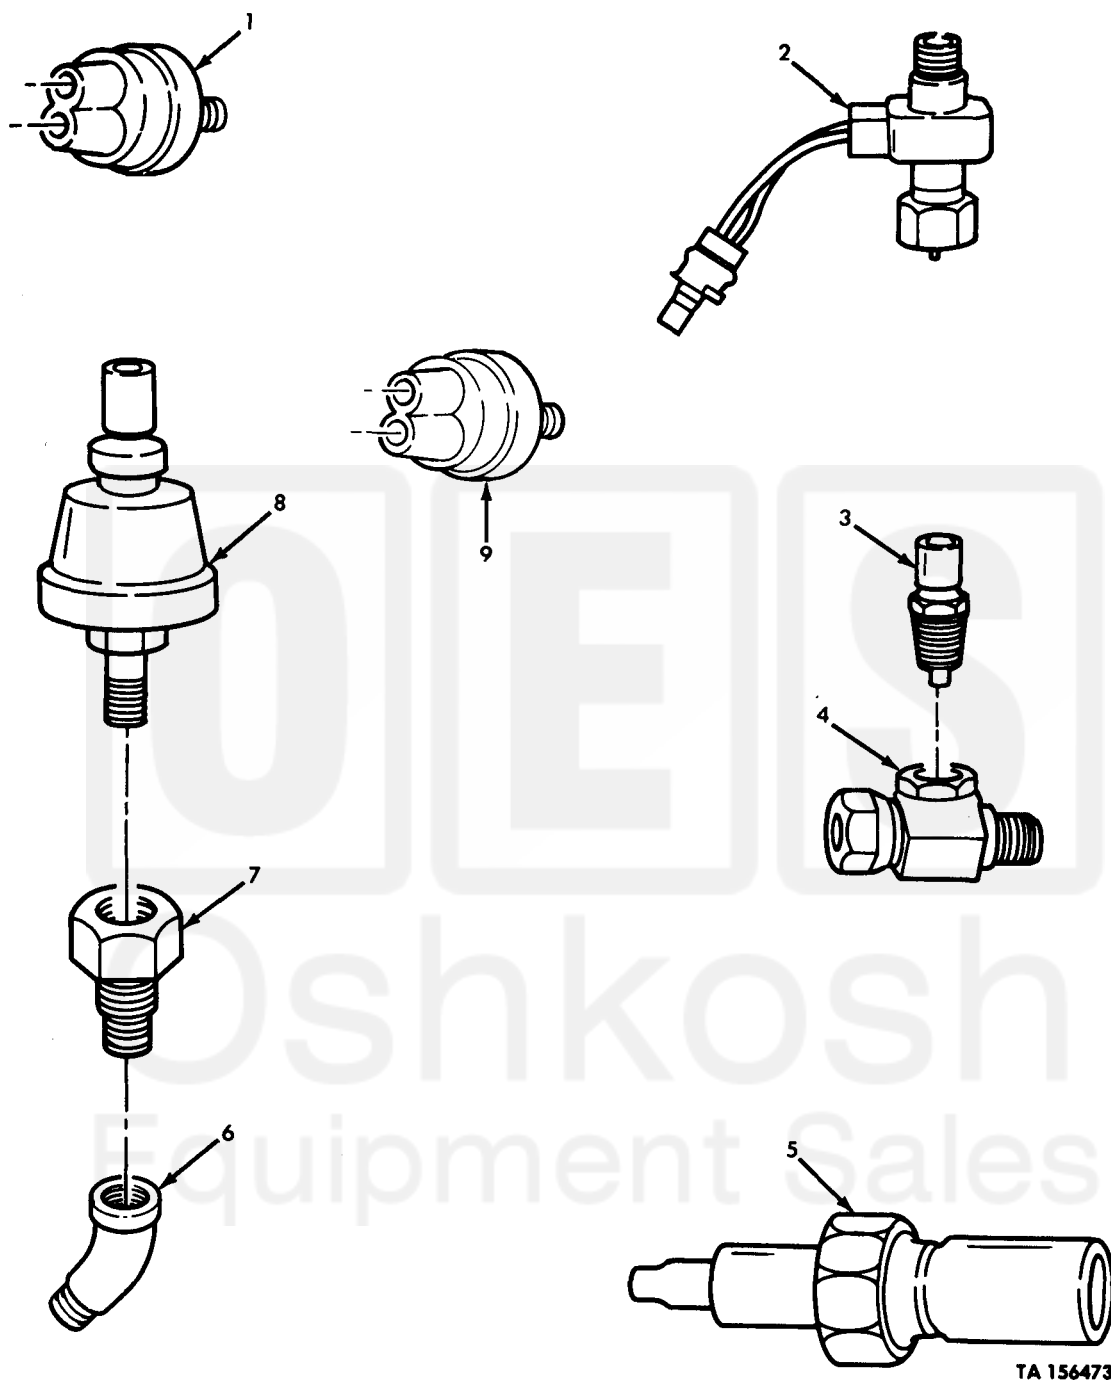


Figure 94. Low Air Warning Switch, Mechanical Tachometer, Transmission Temperature Transmitter, Coolant Temperature Sending Unit, Oil Pressure Transmitter, and Stoplight Switch.

Current part is item (9) on diagram. Available at www.oshkoshequipment.com

(a) FIG. NO.	(b) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION USABLE ON CODE	U/M	QTY INC IN UNIT
ILLUS.								
GROUP 0610 SENDING UNIT								
FIG. 94 LOW AIR WARNING SWITCH, MECHANICAL								
TACHOMETER, TRANSMISSION TEMPERATURE								
TRANSMITTER, COOLANT TEMPERATURE								
SENDING UNIT, OIL PRESSURE								
TRANSMITTER, AND STOPLIGHT SWITCH								
94	1	PA0ZZ	5930-01-189-0494	11669414-1	19207	PRESSURE SWITCH LOW AIR WARNING	EA	2
94	2	PA0ZZ	6680-01-114-7653	12258931-1	19207	TACHOMETER	EA	1
94	3	PA0ZZ	6685-00-814-5271	MS24537-1	96906	TRANSMITTER TRANSMISSION OIL TEMPERATURE	EA	1
94	4	PA0ZZ	4730-01-091-0266	12256531	19207	TEE	EA	1
94	5	PA0ZZ	6685-00-042-4165	142511	15434	TRANSMITTER ENGINE COOLANT TEMPERATURE	EA	1
94	6	PA0ZZ	4730-00-249-3932	MS39231-1	96906	ELBOW, PIPE	EA	1
94	7	PA0ZZ	4730-00-529-1487	444012	24617	REDUCER, PIPE	EA	1
94	8	PA0ZZ	6620-00-993-5546	MS24539-1	96906	TRANSMITTER OIL PRESSURE	EA	1
94	9	PA0ZZ	5930-00-789-6192	11602160	19207	SWITCH, PRESSURE STOPLIGHT	EA	1

END OF FIGURE



Current part is item (9) on diagram. Available at www.oshkoshequipment.com