


Current part is item (1) on diagram. Available at www.oshkoshequipment.com

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION		(4) UNIT OF MEAS.	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUSTRATION	
						(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	(a) FIGURE NO.	(b) ITEM NO.
		GROUP 0610—SENDING UNITS AND WARNING SWITCHES									
PO	2910-292-0035	GASKET: fuel level transmitter, 7375146 (19207).		EA	1	*	*	*	*	3-2	1
PO	6680-676-9242	TRANSMITTER: fuel level, 8376496 (19207).		EA	1	*	*	*	*	3-2	2
PO	5305-042-4505	SCREW, AND WASHER ASSEMBLY: rh-hd, cut-teeth lock washer, s, cd or zn-pltd, No. 10-32 UNF-2A X 7 / 16 in. lg, to attach fuel level transmitter, 424505 (21450).		EA	5	*	*	*	*	3-2	3
		OIL PRESSURE SWITCH AND TEMPERATURE TRANSMITTER FIG. 6-19.									
PO	6685-814-5271	TRANSMITTER, TEMPERATURE: electrical resistance, MS24537-1 (96906).		EA	1	*	*	*	*	6-19	1
PO	6620-814-4770	TRANSMITTER: oil pressure, MS24538-1 (96906).		EA	1	*	*	*	*	6-19	2
PO	4730-529-1487	REDUCER, PIPE: oil pressure safety switch to oil filter adapter, 444012 (21450).		A	1	*	*	*	*	6-19	3
PO	5930-771-8119	SWITCH: oil pressure safety, 10874979 (19207).		A	1	*	*	*	*	6-19	4

Current part is item (1) on diagram. Available at www.oshkoshequipment.com

Current part is item (1) on diagram. Available at www.oshkoshequipment.com

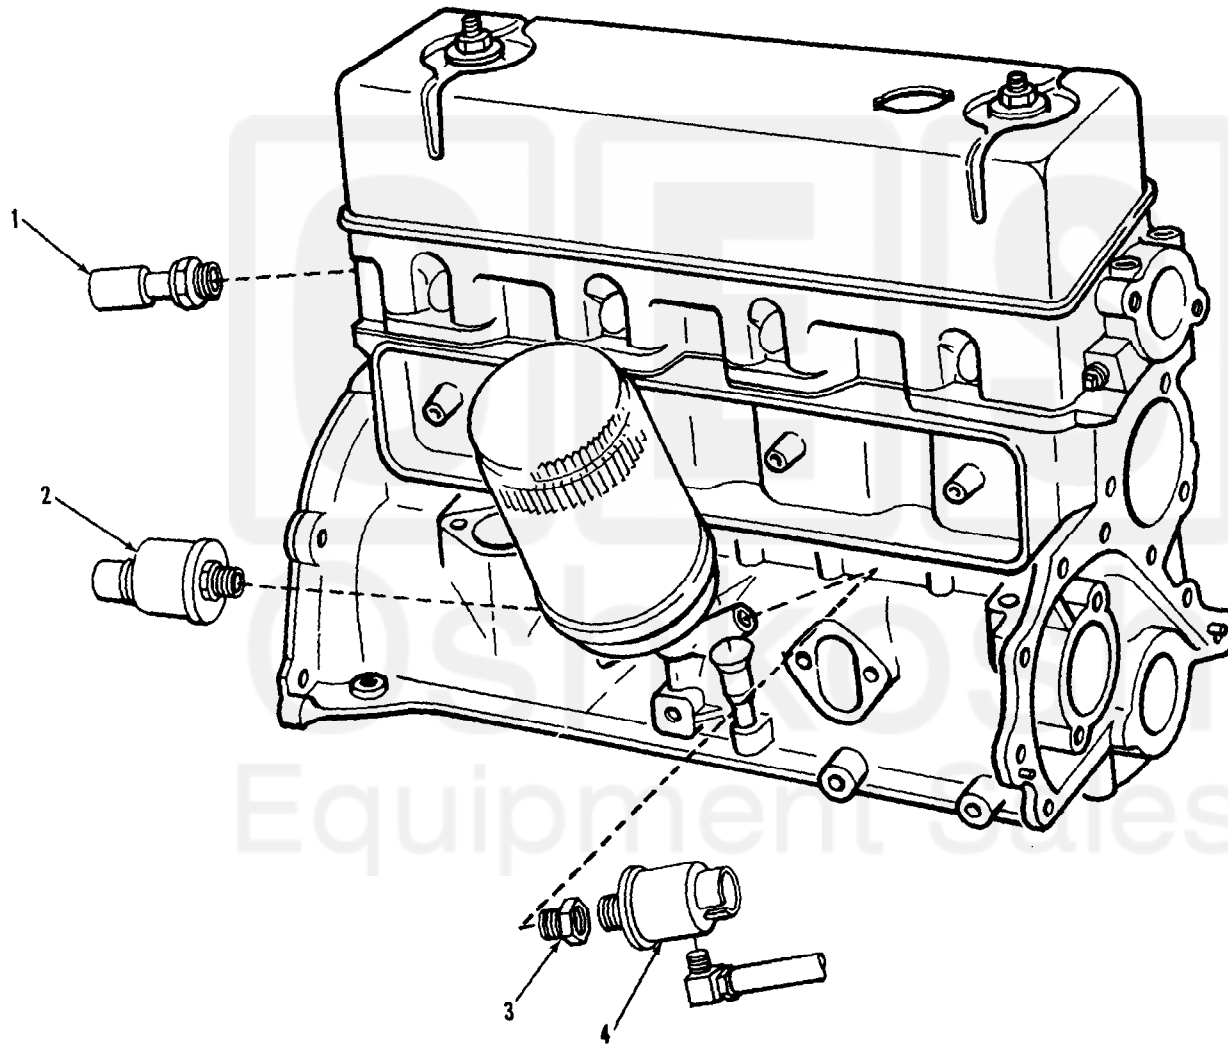

AT 8799

Figure 6-19. Oil pressure switch and temperature transmitter.

Current part is item (1) on diagram. Available at www.oshkoshequipment.com