


Current part is item (19) on diagram. Available at www.oshkoshequipment.com

3-58

TM 9-2320-211-34P

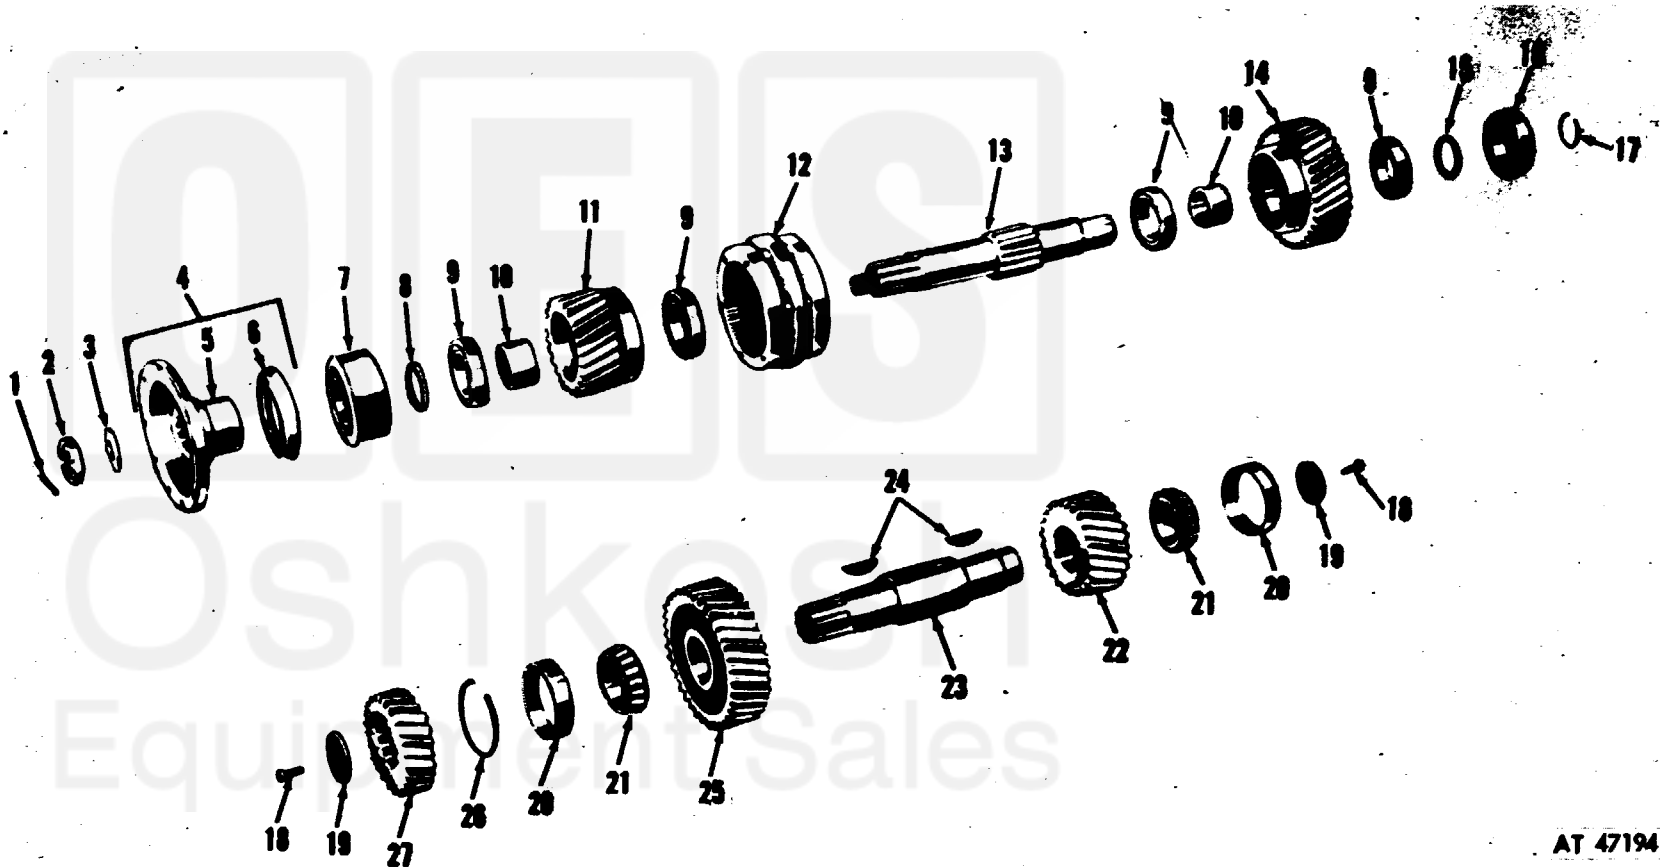

AT 47194

Figure 54. Transfer input and intermediate shafts.

Current part is item (19) on diagram. Available at www.oshkoshequipment.com