


(1) SMR Code	(2) Federal Stock Number	(3) Description	(4) Unit of Meas.	(5) Qty	(6) 15-day Organizational	(7) Illustration No.	(a) Figure No.	(b) Item No.		
Reference number & mfg. code			Usable on code				(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100
		0503-WATER MANIFOLD, HEADERS, THERMOSTATS-CONTINUED								
PAOZZ	5310-732-0558	NUT,PLAIN HEXAGON: 3/8-16UNC-2B,WATER HEADER MS51967-8 (96906)	AA	EA	2	* * * *	42	23		
PAOZZ	5310-637-9541	WASHER,LOCK: 3/8 NOM SIZE, WATER HEADER MS35338-46 (96906)	AA	EA	2	* * * *	42	24		
PAOZZ	5307-038-1942	STUD, PLAIN: WATER HEADER X19002 (14351)	AA	EA	2	* * * *	42	25		
PAOZZ	5330-350-6875	GASKET: WATER HEADER TO CYLINDER HEAD 10891GT (31007)	AA	EA	4	* * * *	42	26		
PAOZZ	5305-269-3208	SCREW,CAP,HEXAGON HEAD: 3/8-16UNC-2A X 5/8, WATER HEADER MS90725-57 (96906)	AA	EA	4	* * * *	42	27		
PAOZZ	5310-080-6004	WASHER,FLAT: .406 ID,NOM SIZE, WATER HEADER MS27183-14 (96906)	AA	EA	4	* * * *	42	28		
MOOZZ		HOSE,RUBBER: REAR ENGINE WATER OUTLET HEADER 103111R1 (31007) FABRICATED FROM:	AA	EA	1		42	29		
PAOZZ	4720-235-4117	HOSE,RUBBER: COOLANT LINES 33-H-775 (80244)		FT	V	* * * *				
PAOZZ	2815-179-5645	HOUSING ASSEMBLY: THERMOSTAT 10899061 (19207)	AB	EA	1	* * * *	43	1		
PAOZZ	4730-639-9921	PLUG,PIPE: THERMOSTAT HOUSING 444595 (21450)		EA	1	* * * *	43	2		
XAOZZ		HOUSING, THERMOSTAT: 10899061-1 (19207)			1		43	3		
PAOZZ	4730-221-2137	PLUG,PIPE: 1/4 NPT, THERMOSTAT HOUSING MS20913-2S (96906)		EA	1	* * * *	43	4		
PAOZZ	2930-848-9943	SEAL,PLAIN,ENCASED:THERMOSTAT 7748859 (19207)	AB	EA	1	* * * *	43	5		
PAOZZ	6620-179-2203	THERMOSTAT,FLOW CONTROL: 11641849 (19207)	AB	EA	1	* * * *	43	6		
PAOZZ	2930-851-4653	GASKET: THERMOSTAT HOUSING 10889849 (19207)	AB	EA	1	* * * *	43	7		
PAOZZ	4730-541-7747	CLAMP, HOSE: CYLINDER HEAD WATER OUTLET MANIFOLD TO INTAKE MANIFOLD (4, THERMOSTAT HOUSING TO WATER PUMP (2) AN737TW74-91 (88044)	AB	EA	6	* * * *	43	8		
PAOZZ		HOSE, NONMETALLIC: CYLINDER HEAD WATER OUTLET MANIFOLD TO INTAKE MANIFOLD (1.75 IN.LG) 10889993 (19207)	AB	EA	2	* * * *	43	9		

TA 009225

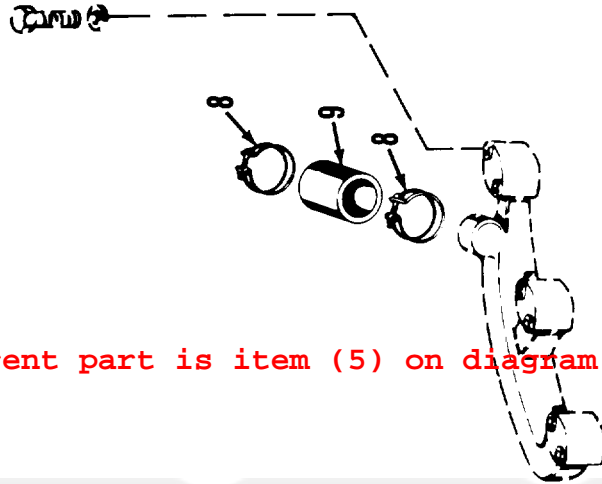

Current part is item (5) on diagram. Available at www.oshkoshequipm

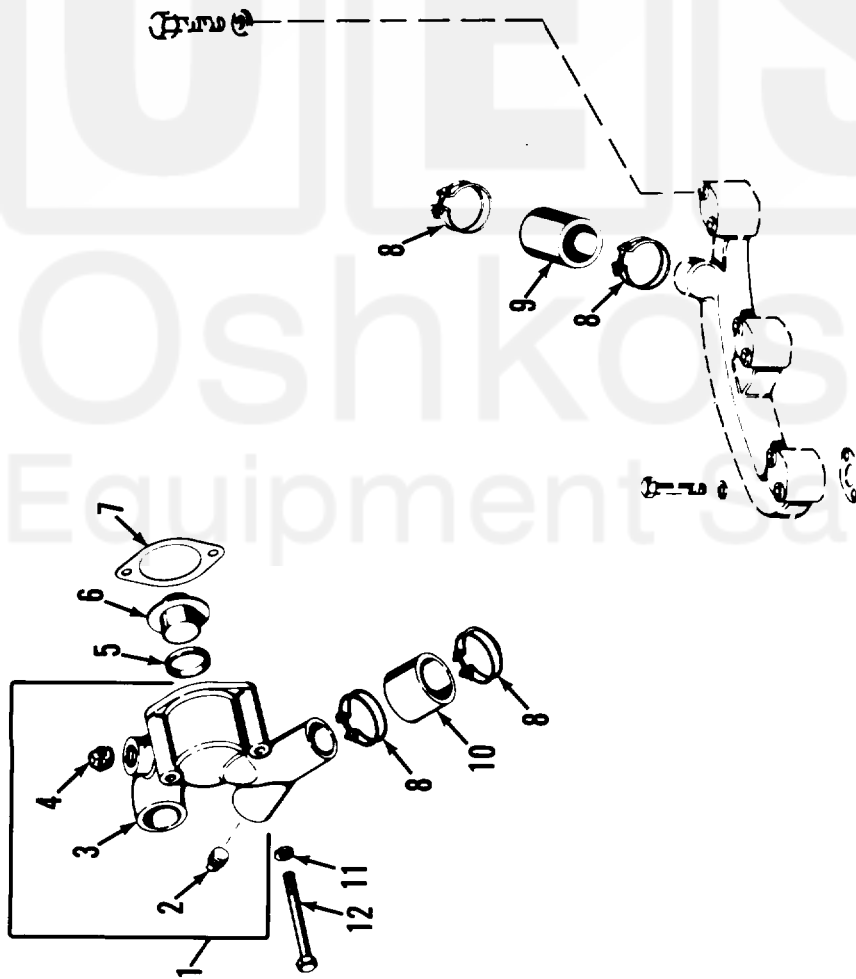


Figure 13. Thermostat housing, thermostat and water manifold hoses and clamps—multifuel.

Current part is item (5) on diagram. Available at www.oshkoshequipm