


Current part is item (11) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)

(1) SMR Code	(2) Federal Stock Number	(3) DESCRIPTION	(4) UNIT	(5) Qty	(6) 30-day DS maint	(7) 30-day GS maint	(8) 1-yr Depot	(9) Illustration	(10)	(11)	(12)	(13)	
Code	Stock Number	DESCRIPTION	of meas	inc. allowance in Unit	allowance	allowance	alw	maint	per 100 equip	alw 100 equip	(a) Figure No.	(b) Item No.	
Reference Number & Mfr. Code	Usable On Code		(a) 1-20	(b) 21-50	(c) 51-100	(a) 1-20	(b) 21-50	(c) 51-100	gcy				
0701-TRANSMISSION SHAFTS-CONTINUED													
P-H	2520-734-678C	GEAR: THIRD SPEED GASOLINE AND MULTIFUEL 7346780 (19207)	AA,AB	EA	1		*	*	*	4	10	45	11
P-H	2520-971-5022	GEAR,HELICAL: MAINSHAFT THIRD SPEED DIESEL 8712206 (19207)	AC	EA	1		*	*	*	4	10	45	11
P-H	5340-734-6787	RING,RETAINING: SECOND AND THIRD SPEED CLUTCH GEAR 7346787 (19207)	A	EA	1		*	*	*	6	10	45	12
P-H	2520-734-7587	SYNCHRONIZER: SECOND AND THIRD SPEED GEAR 7347587 (19207)	A	EA	1		*	*	*	4	10	45	13
P-H	2520-734-6746	GEAR,TRANSMISSION: SECOND AND THIRD SPEED CLUTCH 7346748 (19207)	A	EA	1		*	*	*	4	10	45	14
P-H	2520-734-6741	GEAR,HELICAL: SECOND SPEED 7346741 (19207)	A	EA	1		*	*	*	4	10	45	15
P-H	2520-562-043C	SHAFT,MAIN, TRANSMISSION: 7376164 (19207)	A	EA	1		*	*	*	4	10	45	16
P-H	2520-734-674C	GEAR,SPUR: FIRST SPEED AND REVERSE 7346740 (19207)	A	EA	1		*	*	*	4	10	45	17
P-H	5315-167-1814	PIN,COTTER: MAIN SHAFT 590185 (21450)	A	EA	1		*	*	*	6	10	45	18
P-H	5310-262-6121	NUT,SLOTTED,HEXAGON: COMPANION FLANGE 5141287 (19207)	A	EA	1		*	*	*	6	10	45	19
P-H	2520-734-7596	FLANGE: COMPANION 7347596 (19207)	A	EA	1		*	*	*	3	5	45	20
P-H	2520-734-7595	SLINGER: TRANSMISSION MAIN SHAFT 7347595 (19207)	A	EA	1		*	*	*	4	10	45	21
X2-H		RING: MAIN SHAFT 8711338 (19207)	A	EA	1		*	*	*			45	22
P-H	3110-155-676C	BEARING,BALL,ANNULAR: MAIN SHAFT 102231R91 (31007)	A	EA	1		*	*	*	4	10	45	23
P-H	2620-051-5306	GEAR KIT,HELICAL 5703995 (19207) CONSISTING OF:	AA,AB	EA	1		*	*	*	10	20		
		2520-734-752C1-GEAR,HELICAL 7347520 (19207)										43	3
		2520-692-61811-GEAR, DRIVE 833622 (19207)										45	3
0703-TRANSMISSION CLUTCH AND CLUTCH CONTROLS													
P-F	5330-737-6584	GASKET: HOUSING TO ENGINE FLYWHEEL HOUSING 7376584 (19207)	A	EA	1	*	*	*	*	15	100	46	1

Current part is item (11) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)

Current part is item (11) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)

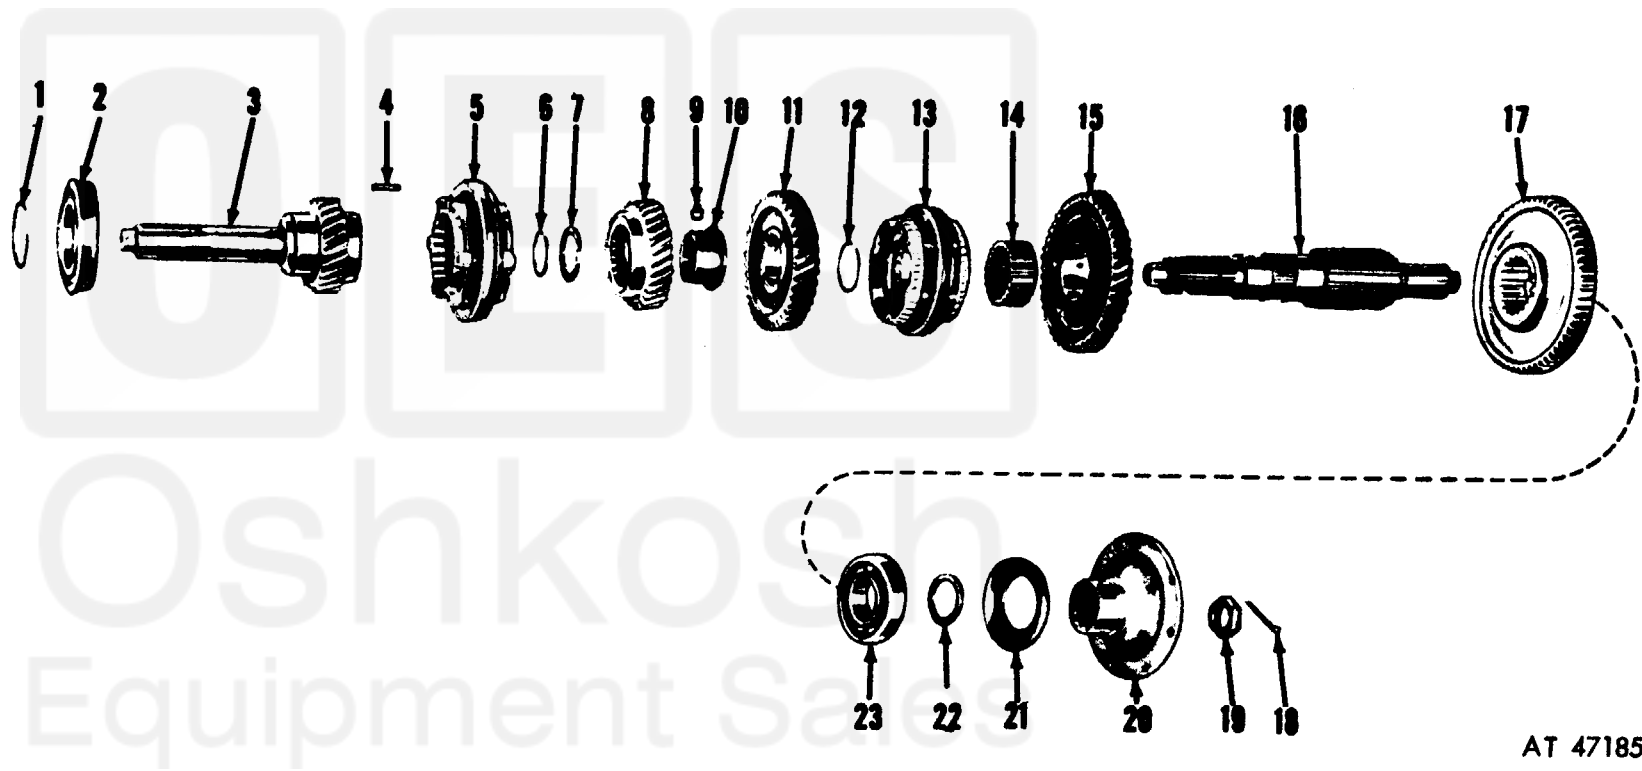

AT 47185

Figure 45. Transmission input shaft and main shaft with gears.

Current part is item (11) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)