


Current part is item (14) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)

(1) SMR Code	(2) Federal Stock Number	(3) DESCRIPTION	(4) UNIT	(5) Qty	(6) 30-day DS maint	(7) 30-day GS maint	(8) 1-yr	(9) Depot	(10) Illustration	of allowance	of allowance	alw	maint		
Code	Stock Number									meas in Unit		per 100 equip	alw 100 equip	(a) No.	(b) Figure No.
Reference Number & Mfr. Code		Usable On Code		(a)	(b)	(c)	(a)	(b)	(c)						
				1-20	21-50	51-100	1-20	21-50	51-100	gcy					
0701-TRANSMISSION SHAFTS-CONTINUED															
P-H	2520-734-6780	GEAR: THIRD SPEED GASOLINE AND MULTIFUEL 7346780 (19207)	AA,AB	EA	1		*	*	*		4	10	45		11
P-H	2520-971-5022	GEAR,HELICAL: MAINSHAFT THIRD SPEED DIESEL 8712206 (19207)	AC	EA	1		*	*	*		4	10	45		11
P-H	5340-734-6787	RING,RETAINING: SECOND AND THIRD SPEED CLUTCH GEAR 7346787 (19207)	A	EA	1		*	*	*		6	10	45		12
P-H	2520-734-7587	SYNCHRONIZER: SECOND AND THIRD SPEED GEAR 7347587 (19207)	A	EA	1		*	*	*		4	10	45		13
P-H	2520-734-6748	GEAR,TRANSMISSION: SECOND AND THIRD SPEED CLUTCH 7346748 (19207)	A	EA	1		*	*	*		4	10	45		14
P-H	2520-734-6741	GEAR,HELICAL: SECOND SPEED 7346741 (19207)	A	EA	1		*	*	*		4	10	45		15
P-H	2520-562-0430	SHAFT,MAIN,TRANSMISSION: 7376164 (19207)	A	EA	1		*	*	*		4	10	45		16
P-H	2520-734-6740	GEAR,SPUR: FIRST SPEED AND REVERSE 7346740 (19207)	A	EA	1		*	*	*		4	10	45		17
P-H	5315-167-1814	PIN,COTTER: MAIN SHAFT 590185 (21450)	A	EA	1		*	*	*		6	10	45		18
P-H	5310-262-6121	NUT,SLOTTED,HEXAGON: COMPANION FLANGE 5141287 (19207)	A	EA	1		*	*	*		6	10	45		19
P-H	2520-734-7596	FLANGE: COMPANION 7347596 (19207)	A	EA	1		*	*	*		3	5	45		20
P-H	2520-734-7595	SLINGER: TRANSMISSION MAIN SHAFT 7347595 (19207)	A	EA	1		*	*	*		4	10	45		21
X2-H		RING: MAIN SHAFT 8711338 (19207)	A	EA	1		*	*	*				45		22
P-H	3110-155-6760	BEARING,BALL,ANNULAR: MAIN SHAFT 102231R91 (31007)	A	EA	1		*	*	*		4	10	45		23
P-H	2620-051-5306	GEAR KIT,HELICAL 5703995 (19207) CONSISTING OF:	AA,AB	EA	1		*	*	*		10	20			
		2520-734-7520	C1-GEAR,HELICAL 7347520 (19207)										43		3
		2520-692-61811	GEAR, DRIVE 833622 (19207)										45		3
0703-TRANSMISSION CLUTCH AND CLUTCH CONTROLS															
P-F	5330-737-6584	GASKET: HOUSING TO ENGINE FLYWHEEL HOUSING 7376584 (19207)	A	EA	1	*	*	*	*	*	*	15	100	46	1

Current part is item (14) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)

Current part is item (14) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)

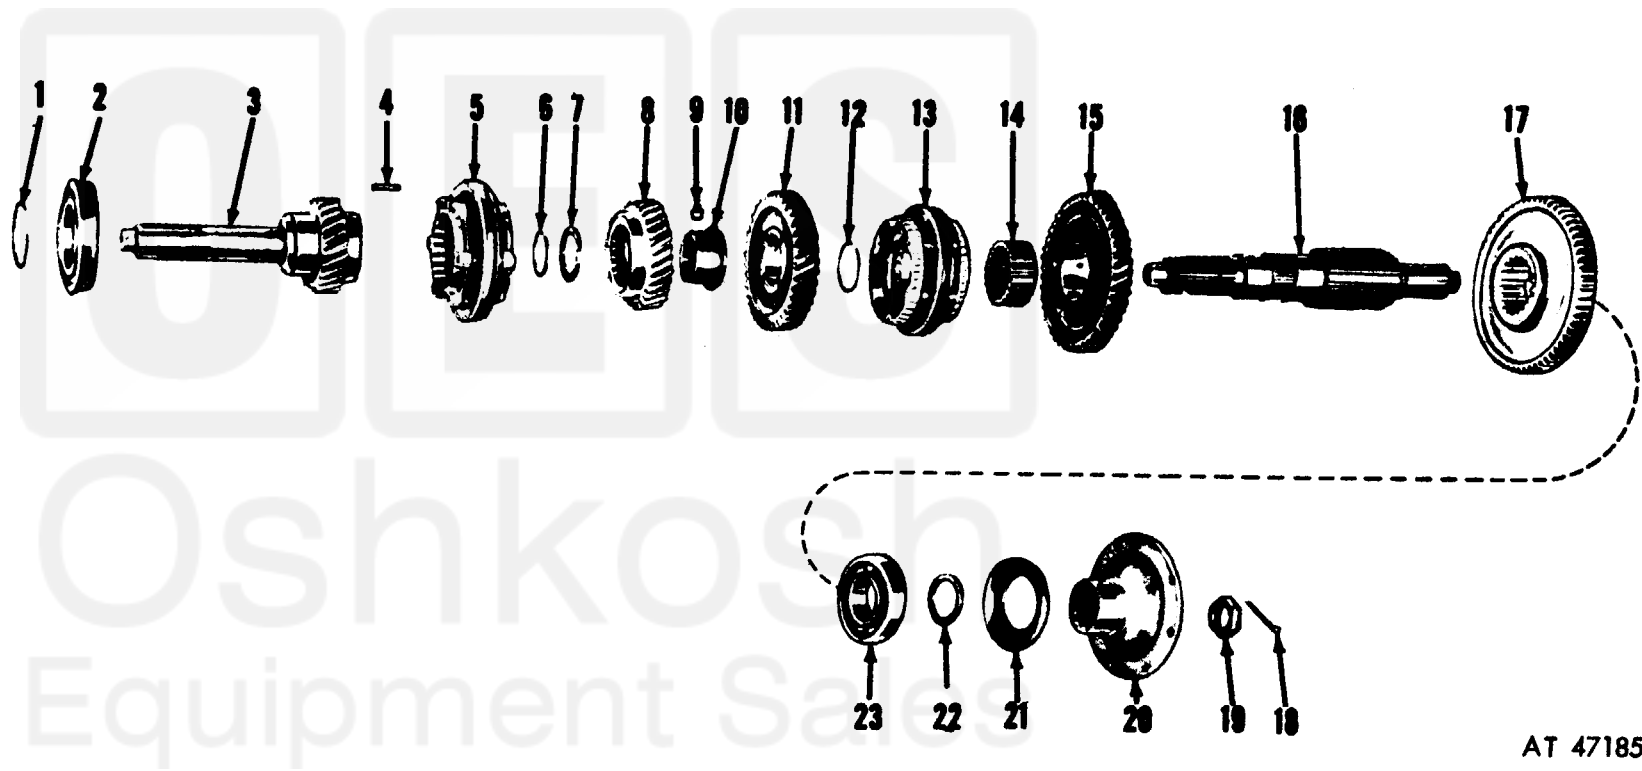

AT 47185

Figure 45. Transmission input shaft and main shaft with gears.

Current part is item (14) on diagram. Available at [www.oshkoshequipment.com](http://www.oshkoshequipment.com)