

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LIST

EXTENDED SERVICE PROGRAM (ESP)

TRUCK, CARGO, 2-1/2-TON, 6X6, M44A3 SERIES TRUCKS (DIESEL)

M35A3, W/O WINCH (NSN 2320-01-383-2047); W/WINCH (NSN 2320-01-383-3850);  
M35A3C, W/O WINCH (NSN 2320-01-383-2050); W/WINCH (NSN 2320-01-383-2049);  
M36A3, W/O WINCH (NSN 2320-01-383-2048); W/WINCH (NSN 2320-01-383-2046).

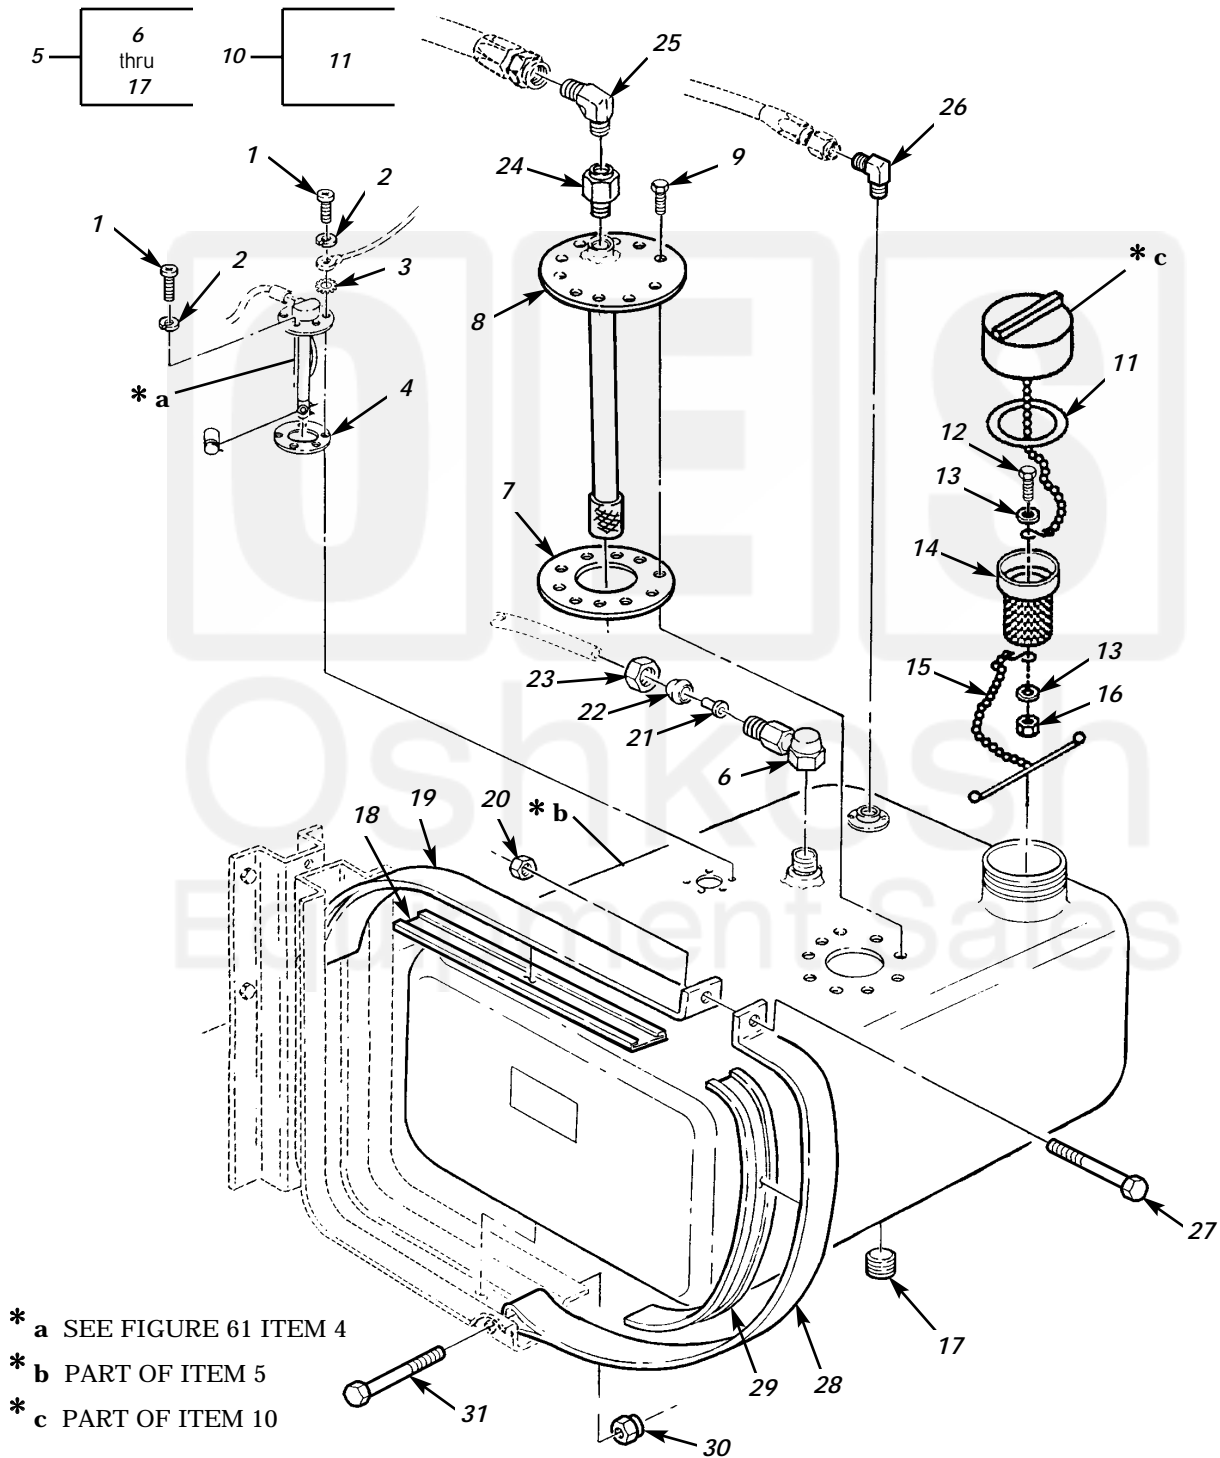


Figure 30. Fuel Tank Assembly and Mounting Hardware.

(1) ITEM NO	(2) SMR CODE	(3) NSN	TM9-2320-386-24P (4) CAGEC	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODES(UC)	0031 00 (7) QTY
GROUP 0306 TANKS,LINES,FITTINGS, HEADERS						
FIG. 30 FUEL TANK ASSEMBLY AND MOUNTING HARDWARE						
1	PAZZ	5305009846195	96906	MS35206-247	SCREW,MACHINE.....	5
2	PAZZ	5310008105335	96906	MS15795-507	WASHER,FLAT.....	5
3	PAZZ	5310005967693	96906	MS35335-31	WASHER,LOCK.....	1
4	PAZZ	5330007539072	19207	7539072	GASKET.....	1
5	PAOO	2910014108792	19207	12448519	TANK,FUEL,ENGINE.....	1
6	PAZZ	4820013934532	51377	A1386H	.VALVE,VENT.....	1
7	PAZZ	5330014443792	98624	A1377R	.GASKET.....	1
8	XAOZZ		98624	A1375S	.COVER,PLATE.....	1
9	PAZZ	5305009844686	99974	8599621-312	.SCREW,CAP,HEXAGON H.....	10
10	PAZZ		98624	A-1341-C	.CAP,FILLER OPENING.....	1
11	PAZZ		98624	681-A	.GASKET.....	1
12	PAZZ	5305013601957	98624	545	.SCREW,MACHINE.....	1
13	PAZZ	5310000145850	96906	MS27183-42	.WASHER,FLAT.....	2
14	PAZZ		98624	A-1368-D	.STRAINER ELEMENT,SE.....	1
15	PAZZ		98624	A1364A	.CHAIN ASSEMBLY.....	1
16	PAZZ	5310001641790	72582	454749	.NUT,SELF-LOCKING,HE.....	1
17	PAZZ	4730000103875	81348	WW-P-471ACBBUE	.PLUG,PIPE.....	1
18	PAZZ	5340014417189	19207	12448516-1	STRAP,RETAINING.....	2
19	PAZZ	5340007539115	19207	7539115	BAND,RETAINING.....	2
20	PAZZ	5310009824908	96906	MS21045-6	NUT,SELF-LOCKING,HE.....	2
21	PAZZ	4730001324588	79146	H0-159-4	INSERT,TUBE FITTING.....	1
22	PAZZ	4730010486358	81343	4 100115B	SLEEVE,COMPRESSION,.....	1
23	PAZZ	4730010486968	81343	4 100110B	NUT,TUBE COUPLING.....	1
24	PAZZ	4820014089958	19207	12448555	VALVE,CHECK.....	1
25	PAZZ	4730002313014	96906	MS20822-10	ELBOW,PIPE TO TUBE.....	1
26	PAZZ	4730008443308	96906	MS51504A8-4	ELBOW,PIPE TO TUBE.....	1
27	PAZZ	5305001658249	19207	10937837	SCREW,CAP,HEXAGON H.....	2
28	PAZZ	5340007539122	56442	642H1	BAND,RETAINING.....	2
29	PAZZ	5330014142198	19207	12448516-2	SEAL,NONMETALLIC SP.....	2
30	PAZZ	5310009843807	96906	MS51922-13	NUT,SELF-LOCKING,HE.....	4
31	PAZZ	5306000514084	96906	MS90727-42	BOLT,MACHINE.....	4

END OF FIGURE